


Template instructions for GPI Pro Anti-slip Waist / Liners

You'll need some paper, tape and a marker pen :)

1, Before proceeding, please put on your Pro vest as it would be when operating. On the waistband measure the space that is left (if any) or, note if there is an overlap. Please make a note of this measurement on your template.

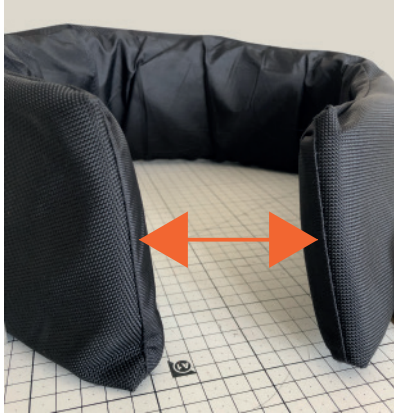


2, Please make a note of your shoulder measurement, as in the picture below.



3, Remove waistband from the vest. Draw around as clearly as possible, please also mark where the Velcro and straps are attached.



4, To allow us to make the back pad liner remove back pad and carefully draw around. Please provide an indication where the buckle is on the outside underarm section, as shown below.

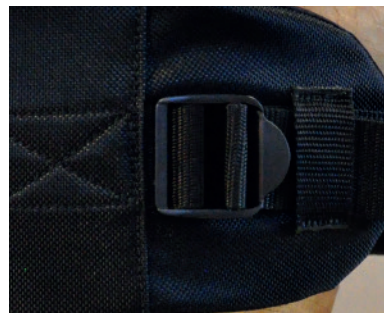

5, Lastly as a final precaution, let us know the measurement of your waist, specifically where your Pro waistband would sit.

Please send paper template to this address:

**Cinetex Ltd, 93 Spring Road,
Southampton,
SO19 2QH,
UK**

 **cinetex_ltd**
contact@cinetex.co.uk

M. +44 (0)7802 637878